

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 5257 А  
для автомобилей  
Chevrolet Aveo НВ**

	2008 - ...
	1200
	50
	21,4




462800,

18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 799-13-46  
www.bosal-autoflex.ru  
www.bosal.com

	« - »:
"	- " (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" " 8(343) 379-39-89, 373-42-73
"	" " 8(343) 26-88-308
"	" " 8(3952) 710-194
"	" " 8(495) 777-54-59
"	" " 8(495) 745-79-11
"	" " 8(495) 788-95-97
"	" " 8(495) 720-51-03
"	" " 8(3532) 57-99-85
"	" " 8-905-899-5012
"	" " 8(383) 291-59-60
"	" " 8(831) 279-53-24
"	" " 8(3422) 98-27-20
"	" " 8(342) 220-87-87
"	" " 8-927-002-90-06
"	" " 8(3462) 24-00-44
"	" " 8(3842) 21-14-76
"	" " 8-902-940-4151
"	" " 8(3452) 32-22-12, 41-52-62
"	" " 8-961-213-0278
"	" " 8-917-347-1700
"	" " 8(351) 269-44-75, 900-72-73
"	" " 8(3512) 773-76-91

41.55-2005.

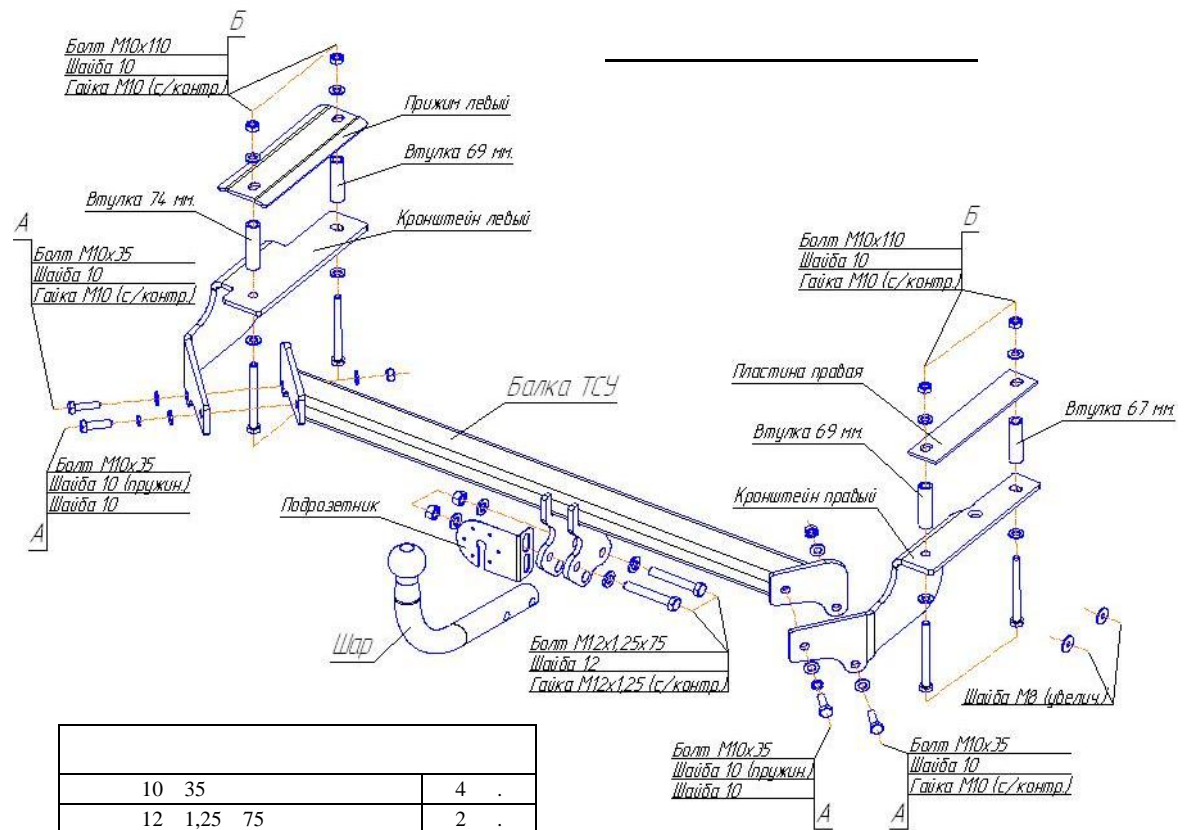

( . .1).


2)

« »

« »

10 = 46 Nm, 12 = 79 Nm.

( . .8 ).

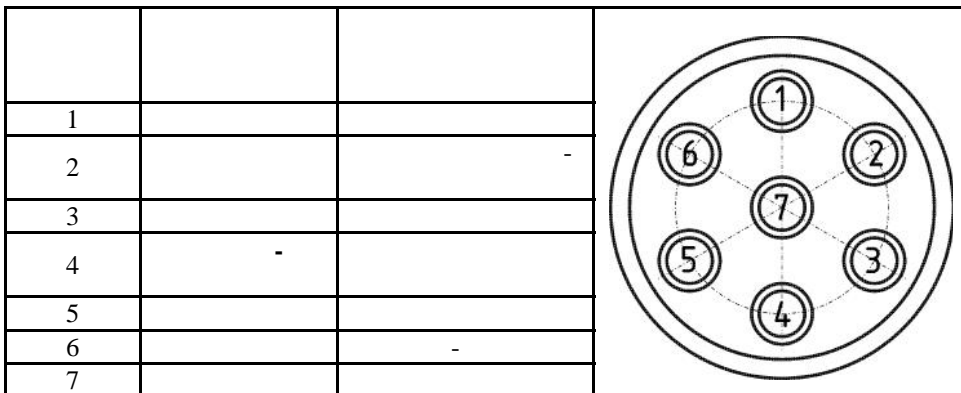

10	35	4 .
12	1,25 75	2 .
10	110	4 .
10	/	6 .
12	1,25 /	2 .
10	.	2 .
12	.	4 .
8	.	2 .
10	.	14 .
L=74	.	1 .
L=67	.	1 .
L=69	.	2 .
4	35	3 .
4	.	3 .
4	.	3 .
		1 .
	190	1 .
VH 0854	.	1 .
	.	1 .
	.	1 .
	.	1 .
	.	1 .
	.	1 .
	.	1 .

	1 .
	1 .
	1 .
	1 .
	1 .

