

bosal

**Инструкция
по монтажу тягово-сцепного устройства
шарового типа 2551 А
для автомобилей
Citroen Berlingo 2
Peugeot Partner 2**

	05/2008--
	1200
	50
	19,2



462800,

т. (35363) 7-05-06

факс: (35363) 7-13-20

(495) 785-66-07


www.bosal-autoflex.ru

« - »	(8182) 22-48-15
" " 8(8442) 98-74-98	" " 8(343) 379-39-89, 373-42-73
" " 8(343) 26-88-308	" " 8(3952) 710-194
" " 8(495) 777-54-59	" " 8(495) 745-79-11
" " 8(495) 788-95-97	" " 8(495) 720-51-03
" " 8(3532) 57-99-85	" " 8-905-899-5012
" " 8(383) 291-59-60	" " 8(831) 279-53-24
" " 8(3422) 98-27-20	" " 8(342) 220-87-87
" " 8-927-002-90-06	" " 8(3462) 24-00-44
" " 8(3842) 21-14-76	" " 8-902-940-4151
" " 8(3452) 32-22-12, 41-52-62	" " 8-961-213-0278
" " 8-917-347-1700	" " 8(351) 269-44-75, 900-72-73
" " 8(3512) 773-76-91	

« ».

: 10 = 46 Nm; 12 = 79

Nm; 12 1,25 = 95 Nm.

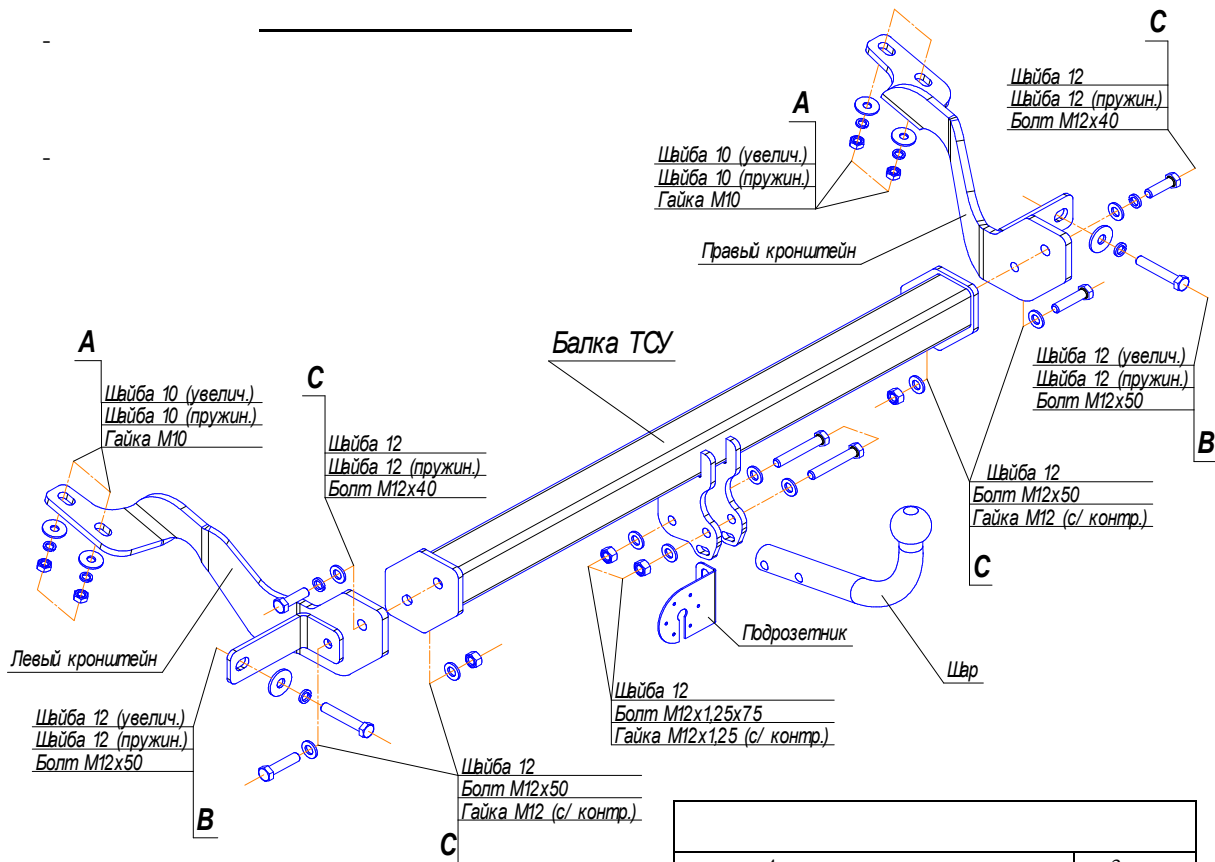

	1 .
	1 .
	1 .
	1 .
	1 .

4	3 .
4	3 .
4	3 .
4 35	3 .
12 40	2 .
12 50	4 .
12 1,25 75	2 .
10	4 .
12 /	2 .
12 1,25 /	2 .
10 (.)	4 .
10 (.)	4 .
12	10 .
12 (.)	2 .
12 (.)	4 .
VH 0867	1 .
	1 .
	1 .
	1 .
190	1 .
	1 .

