

# bosal

## Инструкция по монтажу тягово-цепного устройства шарового типа 1426 А для автомобилей **Renault Kangoo 2**

	2008 -...
	1670
	1100
	50
D, .	6,5
	19,0



462800,

« - »

18

∴ (35363) 7-05-06

/ ∴ (35363) 7-13-20



(495) 785-66-07

[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)


« - »	(8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495) 745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

1. 2
2. 4 « »
3. ( ). « » « »
4. « »
- 5.
6. : 12—79Nm ;
7. 10—68Nm ; 8—34Nm.
- 8.
- 9.

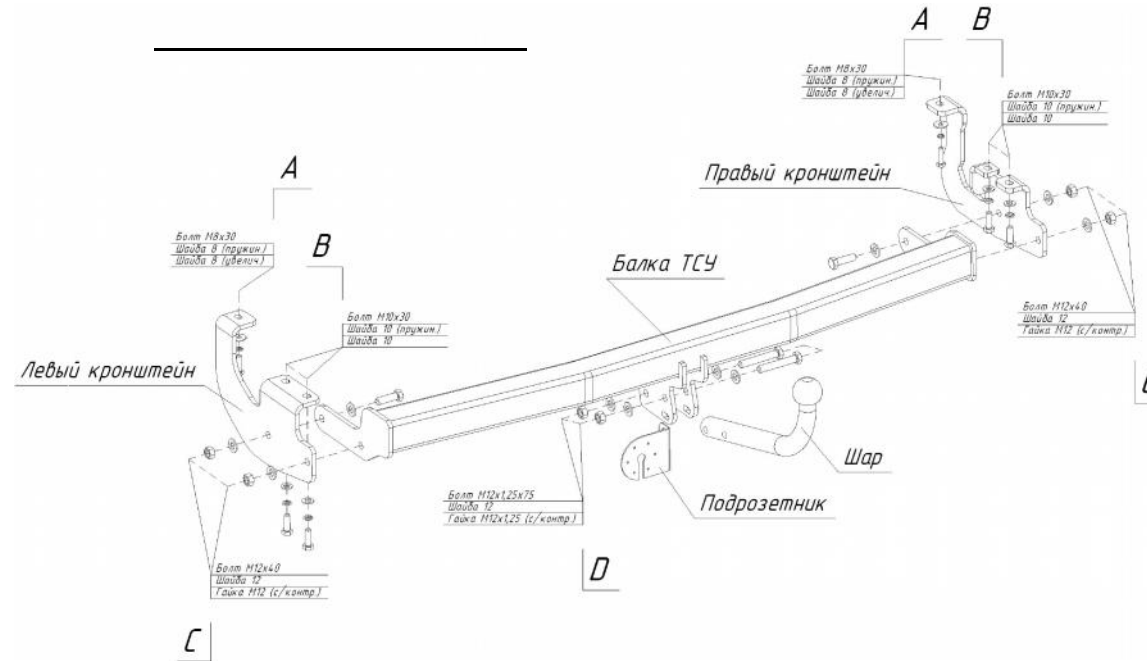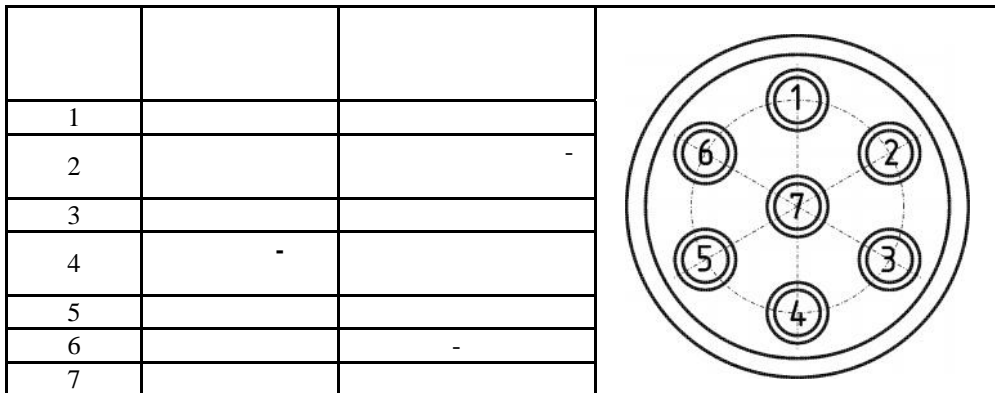

	1 .
	1 .
	1 .
	1 .
	1 .

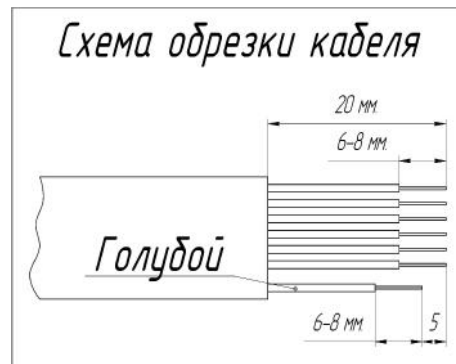

	3 .
4	3 .
4	3 .
4 35	3 .
12 40	4 .
10 30	4 .
8 30	2 .
12 1,25 75	2 .
12 / .	4 .
12 1,25 / .	2 .
10 ( . )	4 .
10	4 .
8 ( . )	2 .
12	12 .
8 ( . )	2 .
VH 0822	1 .
	1 .
	1 .
	1 .
190	1 .
	1 .