

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 1922A  
для автомобилей  
Skoda Fabia  
Combi / Sedan**

	10/2000 - ...
	1100
	50
	12,8



462800,

« - »

18 "

.: (35363) 7-05-06

/ : (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495) 745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91


.....	.....
.....	VIN .....
.....	.....
.....	.....

41.55-2005.

2008 ,  
90 !

: 12—79 Nm, 10—68 Nm.

1			
2			
3			
4			
5			
6			
7			

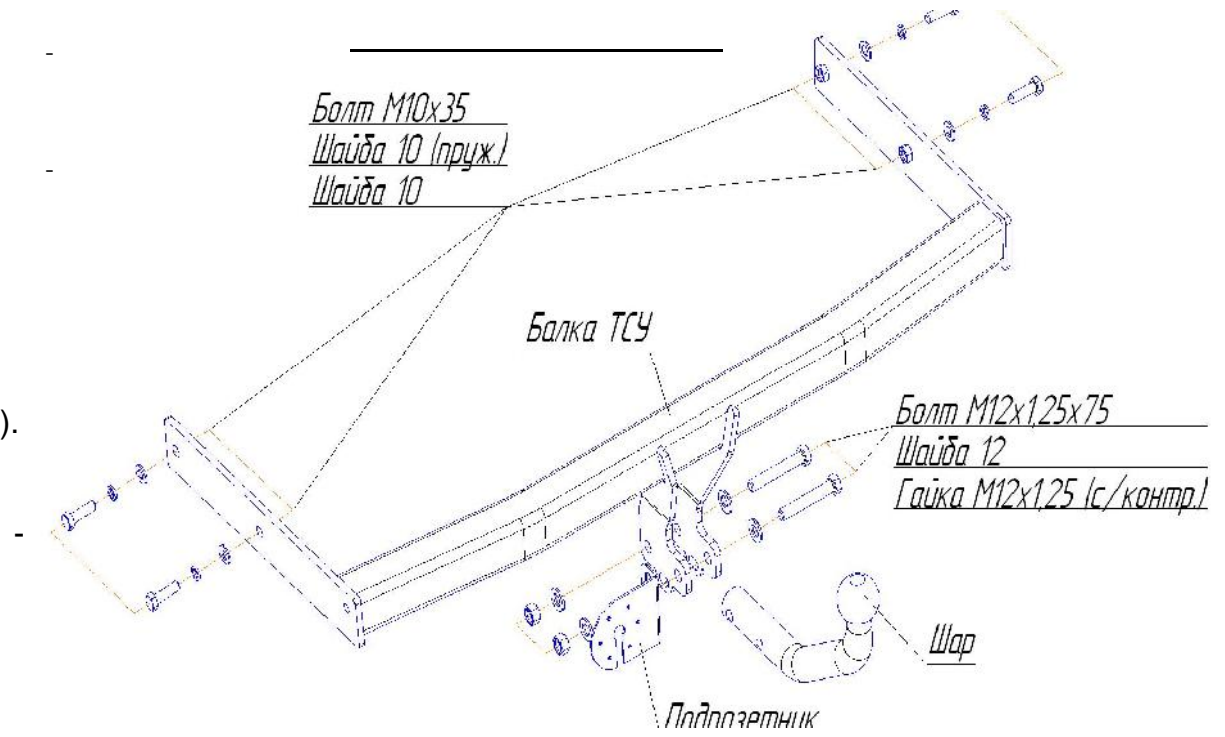

	1	.
	1	.
	1	.

12 1,25 75	2	.
10 35	4	.
12 1,25 /	2	.
12	4	.
10	4	.
10	4	.
4 35	3	.
4	3	.
4	3	.
4 ( . )	3	.
VH 0814	1	.
	1	.
	1	.
	1	.
190	1	.
	2	.
	1	.

