

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 3056 А для автомобилей Toyota Camry

	2006-...
	1500
	50
	13



462800,

« - »

18

∴ (35363) 7-05-06

/ ∴ (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - »	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495) 745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91

41.55-2005.


« »,
d13.

. « ».
« »


12 1,25 60

5 . ()

1			
2			
3			
4			
5			
6			
7			

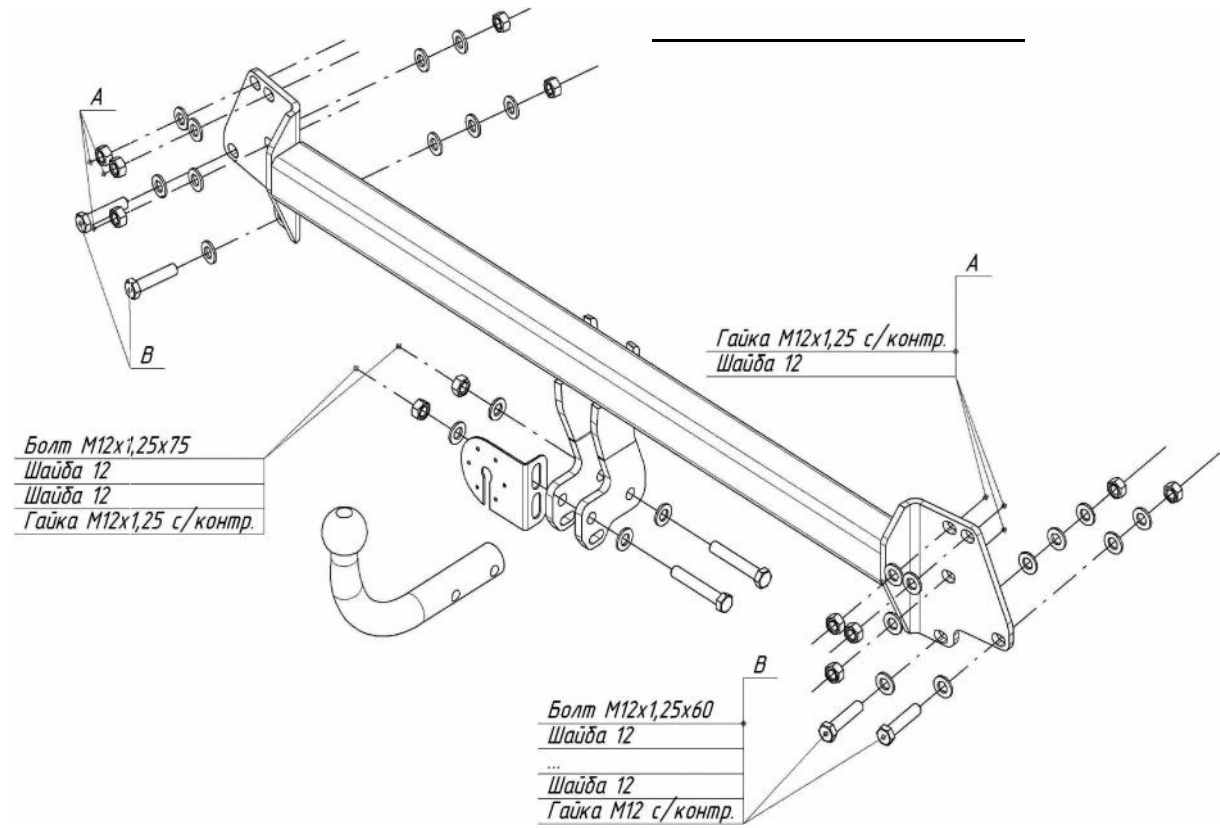

	1 .
	1 .
	1 .

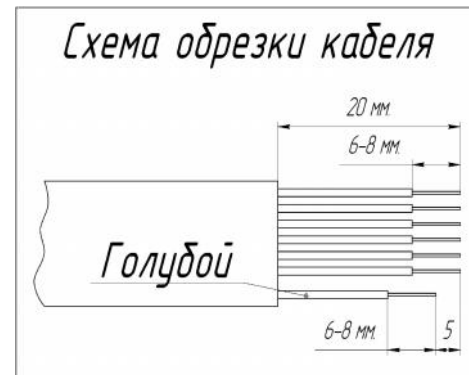

4	3 .
4	3 .
4	3 .
4 35	3 .
12 1,25 60	4 .
12 1,25 75	2 .
12 1,25 /	12 .
12	24 .
VH0808	1 .
	1 .
	1 .
190	1 .
	1 .